


HG-PF-9T

Tactical Pistol LED Flashlight

Features

1. Compact, Low profile, Lightweight and Durable Structure
2. Max. 450 Lumen Output LED Flashlight
3. Low/High/Strobe Mode Options
4. Glove Friendly Smart-sense Momentary On/off Switch for Silent and Quick Operation
5. USB Rechargeable with Built-in Battery Power Indicator (BPI)
6. Multi-Mounting Positions to Best Fit Various Applications

Structure

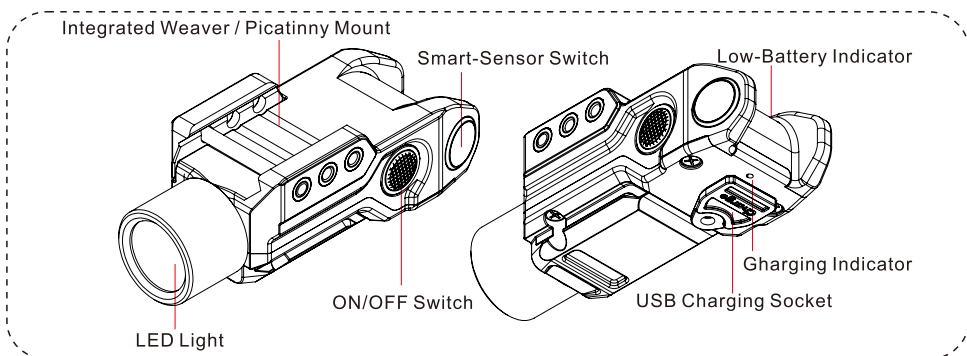

Model Family(s) & Specification


LED Lumen	450lm
Housing Material	Fiber Reinforced Nylon PA66
Dimension	3(L)*1.2(W)*1.1(H)/inch 76.3(L)x30(W)x26.5(H)/mm
Battery Charging Time	1.5h
Net Weight	53.5g
Working Mode	Continuous & Strobe
Battery Type	Build-in Rechargeable Battery
Battery Runtime	Continuous:1h; Strobe:1.6h

Delivery Sets

- Tactical Flashlight
- User Manual
- Wrench
- Packing Box
- Charging Cable

Charging Battery

1. As illustrated in Figure 1, uncover the rubber cap of the USB Charging Socket, plug the charging cable and connect the cable to a USB power adaptor.
2. The Charging Indicator is Red while Charging, and is Green when charging finished.
3. The Low-battery Indicator will flash when the battery is running at low level..

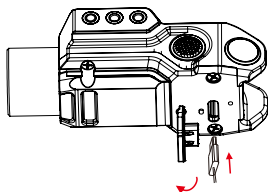

Mounting

WARNING: After first checking to insure that weapon is unloaded and has no ammunition in the chamber.

1. Choose one of three mounting holes for the proper mounting position.
2. Loosen the Locking Screw. Push and hold the Locking Screw, align the Locking Screw with the groove on the rail, clamp the product onto the rail, release and tighten the Locking Screw.

On/off Operation



1. Click one of the On/off Switches to turn on or turn off the unit.
2. Turn on the unit, put finger over one of the Smart-Sensor Switches to momentarily turn off the unit. Move the finger away to resume the unit.

Switch Mode

1. Double-click one of the On/off Switches to turn on the Strobe Light mode. Double-click it again to quit the Strobe Light mode.
2. Turn on the flashlight; double-click both On/off Switches concurrently to adjust the output of the flashlight.

Zero Adjustment

1. Fix the laser sight to the barrel on a weapon.
2. Place the weapon in a vise or on a shooting bench.
3. Place a target about 30m away.
4. The next step assumes that the weapon's iron sights or other sighting system is correctly zeroed for 30m. If not, turn the laser off and fire 5 rounds at the target to see the point of impact grouping. If necessary, adjust your sights to the correct point of impact.
5. Take aim again using the exact same sight picture as in step #4. Turn on the laser sight and you will see the difference in distance between the laser dot and the real point of impact. To adjust the laser to be point of impact, the windage and elevation will need to be adjusted. Rotating the windage and elevation with Allen wrench to adjust the laser.
6. Now use the laser sight, aim at the target, and shoot another group of 5 rounds. If the point of the laser is near the points of impact, then the zero adjustment has been accomplished.

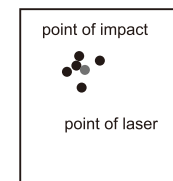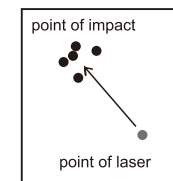

Safety Precautions

Direct viewing of the laser is hazardous to the eyes.
 Never look directly into the laser beam.
 Never point laser beam at person.
 Do not allow children to use laser sight unless under adult supervision.



Warning: Laser beam is forbidden to shoot eyes and skin directly, blindness and burn will be caused.